



50 SIZE FL ROTOR INITIAL SETUP

PARTS

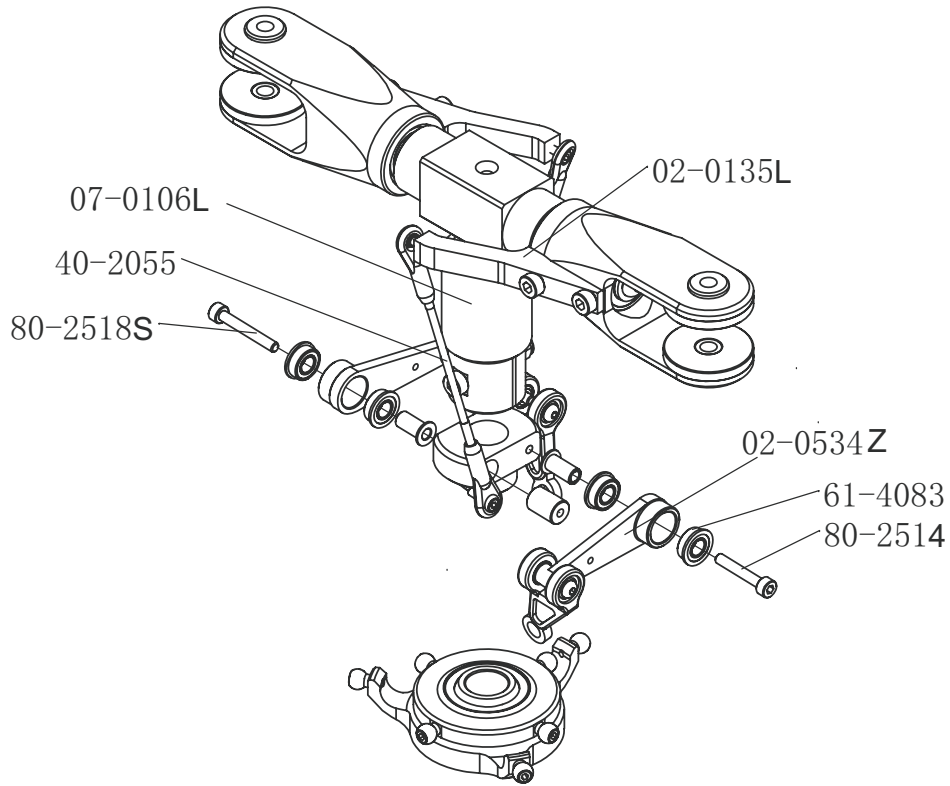

Order NO.	Description	Remark
02-0135L	FL Blade holder arm (50 metal)	1 set/bag
02-0534Z	FL Swash plate Driver arm (50,90metal)	1 set/bag
61-4083	Flanged bearing 4x8x3	4 pcs/bag
07-0106L	FL Rotor hub set(50 metal)	1 set/bag
80-2514	Cap Head Bolt M2.5x14	10 pcs/bag
80-2518S	Cap Head Bolt M2.5x18	10 pcs/bag
40-2055	FL Link Rod (50 metal)	1 set/bag

SETUP

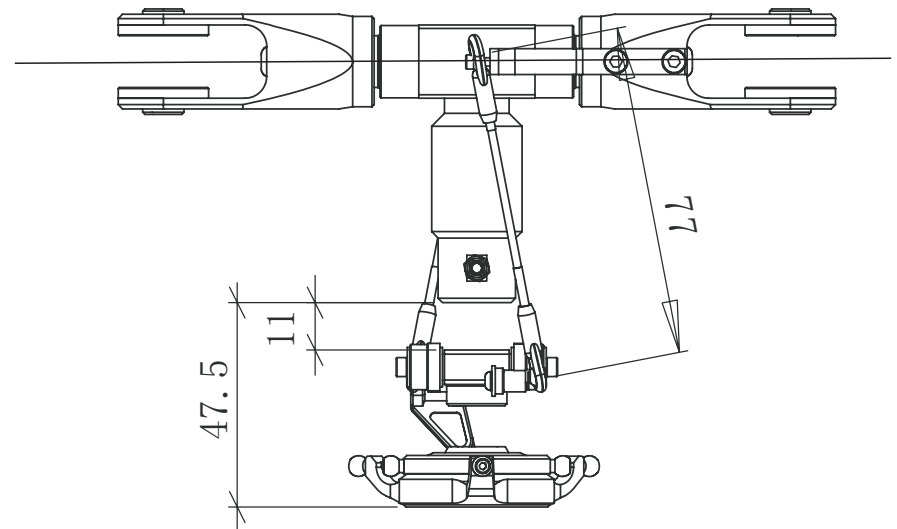

Drawing on the right shows 0 pitch position setup. Put transmitter sticks in middle position. To obtain maximum pitch range, please setup the rotor system as shown on the drawing. All sizes are in mm.

Note: swash driver arms have to be 90 deg to the spindle to get the right phasing.